


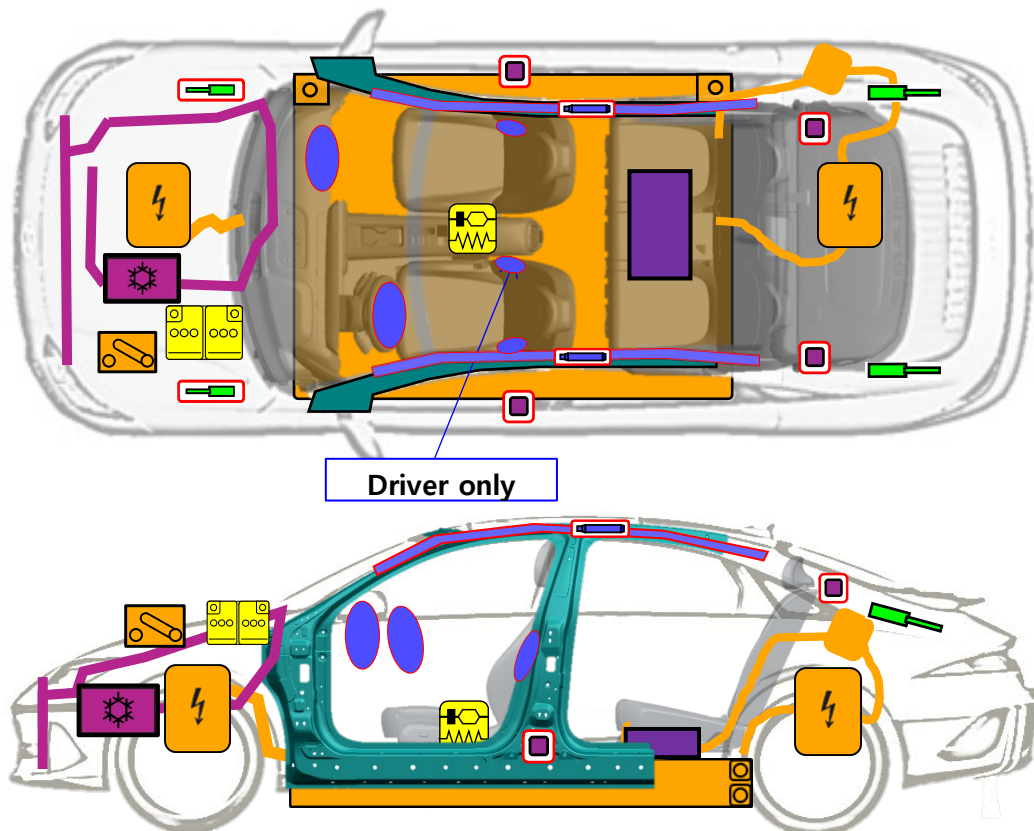

 




 






## Vehicle Identification/Recognition





## Accessing Vehicle



 Supplemental Restraint System Control Module (SRSCM)	 Airbag	 Airbag Gas Inflators
 High voltage cable	 12V Battery	 Air-conditioning line
 High voltage disconnect	 OBC (On – Board Charger)	 Ultra-High Strength Steel
 High Voltage Battery	 Air-conditioning component	 Seat belt pretensioner
 Motor Drive Unit	 Gas Strut	

**Disabling Vehicle**

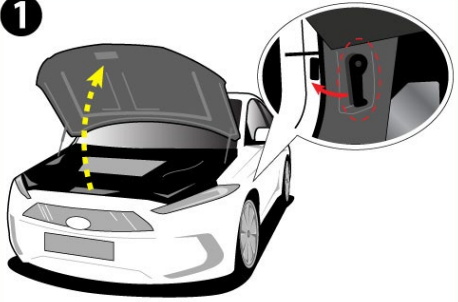
**1**

**2**

**3**

5m (16.4ft) or more  
To Prevent Accidental Restart

1) Remove cover  
2) Disconnect 12V  
3) Wait 5min.

**OR**





**1**

**2**

**3**


5m (16.4ft) or more  
To Prevent Accidental Restart

Remove cover (A)

Disconnect High Voltage System by removing fuse with yellow tab, then wait 5 minutes

**Vehicle Towing Information**

*Tow the vehicle using a flat bed or using wheel dollies. Never tow the vehicle with the front or rear wheels on the ground*

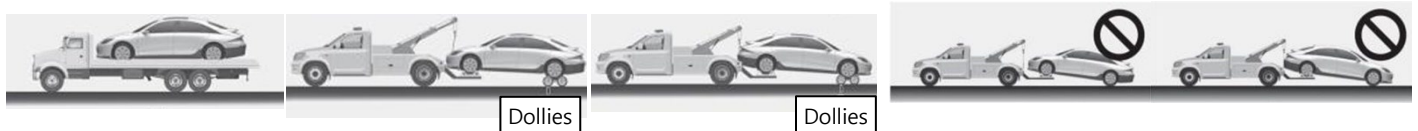

**For further information, please refer to the Emergency Response Guide (ERG).**

Applicable to IONIQ6 vehicles first sold in the United States.	ID. No.	Version No.	Page
	KMH-CE	2023.02.21	2 of 2